

12/14/2017

3 THINGS TO REMEMBER

1. The new Deutz engines with the common rail-electronic injection system will not allow the starter to crank if the fuel pump does not operate. If you get a no crank situation with one of these engines, check that the fuel pump is operating.

2. All Skyjack scissor lifts and boom lifts use dedicated ground wires for all ground connections. There is no frame ground available. When testing electrical issues please remember to use the battery ground, any 00 or 02 white wires for a good ground connection.

3. When installing and calibrating a tilt switch or auto level module, the most important part of the procedure is to ensure the machine frame is level (i.e. the machine is positioned on a level surface). If the frame is not level and the switch is calibrated to that incorrect level, the tilt switch will allow the unit to elevate when outside the allowable amount of tilt on one side – unsafe

If you have any questions, please contact Skyjack Product Support at 1-800-275-9522 or email service@skyjack.com

